

Polycom Kirk Wireless Server (Feature Codes)

Feature Codes

Code	Zweck
***999*00	IP address
***999*01	MAC address
***999*02	Server Firmware

From:

<https://wiki.ucware.com/> - UCware-Dokumentation

Permanent link:

https://wiki.ucware.com/archiv/4_x/server/knowledgebase/endgeraete/polycom/kirk_wireless_server

Last update: **07.06.2023 15:07**